

AIR CONTROL VALVE RW0082

Instructions:



PACKAGE CONTENTS:

1. Air Control Valve
2. RW0082

REQUIRED TOOLS & EQUIPMENT:

1. ¼" – 18 NPT male quick disconnect fitting
2. Air Compressor - Air Control Valve operates up to 125 PSI max

SAFETY PRECAUTIONS:

1. Wear gloves and eye protection at all times
2. NEVER point at skin or direct air stream at unprotected body parts
3. CAUTION: Do not exceed 125 PSI or the maximum limits of the air feed equipment

ASSEMBLY:

1. Screw male disconnect into base using tape or pipe compound
2. Attach air compressor hose to fitting and turn on compressor

OPERATION:

1. Squeeze lever on Air Control Valve to activate
2. The Air Control Valve is made to control compressed air only - not liquid or any other gas