



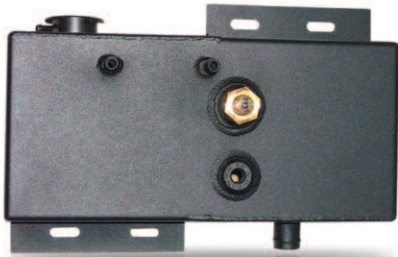

Medium / Heavy Duty Truck and Bus

SURGE TANKS

Northern Radiator offers a large selection of heavy duty, replacement surge tanks for many truck and bus high failure rate applications. For a complete listing go to www.northernfactory.com

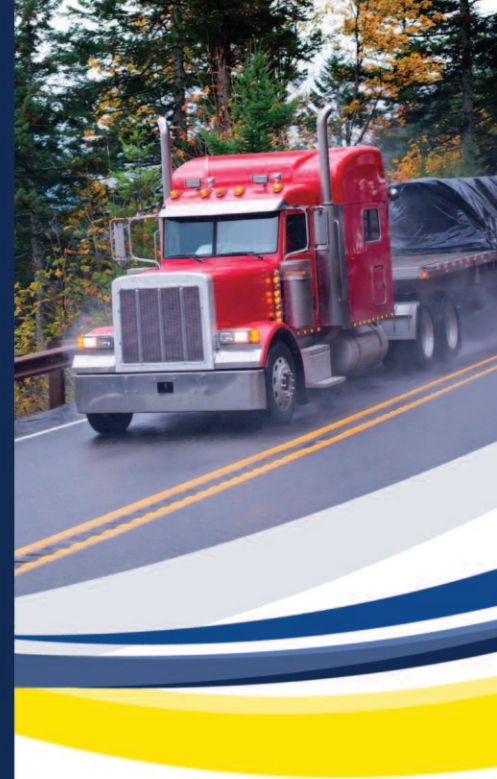


▶ **237035 : BLUE BIRD**
FITS: '11-'14 Vision Bus w/CAT
or Cummins Engines
OE #10009977

▶ **237022 : BLUE BIRD**
FITS: AARE, A3RE & TCRE Bus
OE #01802370



▶ **237045 : BLUE BIRD**
FITS: '13-'15 Rear Engine
T3 Model All American Bus
OE #10032779

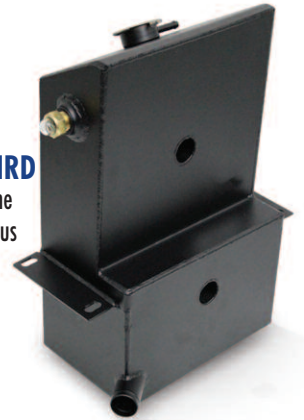

▶ **237017 : FORD**
OE #E9TD8A080BA

▶ **237046 : FREIGHTLINER**
FITS: Cascadia, Coronado SD114,
122, Western Star 5700
OE #A0525263000,
A0525263001



▶ **237032 : FREIGHTLINER/INT'L**
FITS: Chassis Bus w/FS-65 Body
& Mercedes 904 Engine, Also fits several
International models
OE #VMLT3360A, 1619114C5



▶ **237039 : FORD**
FITS: '08-'03 F600, F700, F800 Series Trucks
OE #F6HZ8A080B, F5HT8A080HA



▶ **237026 : FREIGHTLINER**
FITS: FLD112, 120, 132, Classic XL '85-'98
OE #A0512957000



▲ **237037 : INT'L/NAVISTAR**
FITS: '95-'07 INT'L 8600, 8600i, 9100, 9100i,
9200, 9200i, 9400, 9400i, 9900i Series
OE #2587279C92, 2508700C92



▲ **237020 : MACK**
FITS: R Model
OE #76MF432, 25498434



▲ **237036 : PETERBILT**
FITS: '04-'07 378 & 379
OE #F866008, 2316252, 58403




▲ **237021 : SIMON**
OE #1004022



▲ **237012 : SPARTAN**
OE #275FF2



▲ **237043 : THOMAS BUS**
FITS: '06-'11 C2 Bus, SAF-T-Liner Bus,
Freightliner M2 & 106 Trucks
OE #0523195000, 6035202

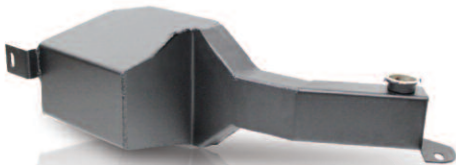

▲ **237047 : THOMAS BUS**
FITS: '12-NEWER C2 Bus,
Freightliner M2 & 106 Trucks
OE #A0528531000, A0528531001



▲ **237010 : VOLVO**
OE #200350007

NEW



▲ **237051 : VOLVO**
FITS: '04-Newer VNL Truck
OE #21314361, 21074555, 20968795